




CinoArt PT2 - Precision Tamp user guide.

Control Reference

Touch pad controls

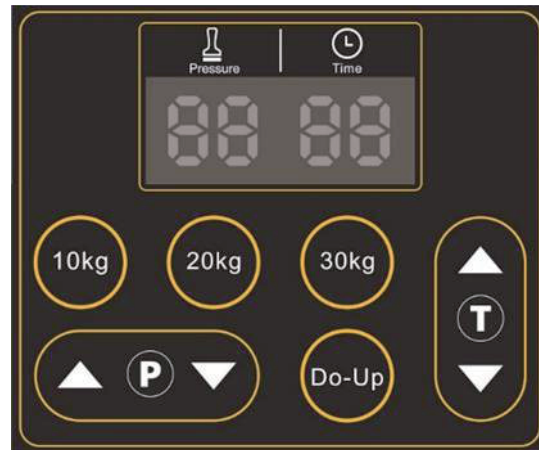

P = Pressure Adjustments

T = Tamper Cycle Adjustments

Dn-Up = Save Settings / Cleaning Mode

Tamp pressures.



Adjust and save up to 3 Quick Pre-Set Pressures.

1. *Select tamp option button you wish to adjust tamp pressure on (10kg, 20kg or 30kg button)*
2. *Adjust the set tamp pressure using the P up/down button.*
3. *To save changes press "do-up" button*

Tamp cycles.



Adjusting the number of tamps per cycle

1. *Select tamp option button you wish to adjust number of tamp cycles (10kg, 20kg or 30kg button)*
2. *Adjust the set number of tamp cycles up or down using the T up/down button.*
3. *To save changes press "do-up" button*

CinoArt PT2 - Precision Tamp user guide.

Segmented multi tamping.



Within each Pre-Set tamping cycle, you can vary the first tamp pressure.

- *Example: 1st Tamp value set at (e.g.) 8kg followed by the 2nd Tamp at (e.g.) 30kg of pressure or any value combination in between 2kg - 38kg.*
1. *Select the Pre-Set Pressure icon you wish to adjust – either 10kg, 20kg or 30kg.*
 2. *Press the T “Up-arrow” adjustment button and then “Dn-Up” button.*
 3. *The screen will then show the first (1) tamp pressure which you can adjust using the Increase/Decrease P +/- kg adjustment buttons.*
 4. *To save changes press (Dn-Up) button.*

Total Tamps Counter Mode



- *To activate the counter function press and hold both (10kg + Nd-Up)*
- *To check the total tamps counter press and hold both (20kg + Dn-Up)*
- *To clear the counter to zero press and hold both (30kg + Dn-Up)*

CinoArt PT2 - Precision Tamp user guide.

Cleaning.



every day or as required.



brush or cloth

Cleaning Tamp assembly



weekly



brush or cloth

Sleep Mode.



Quick clean....

1. Press and hold (Dn-Up) to enter Cleaning Mode - Tamper Comes Down
2. Clean the Tamper Disk with a brush and or a dry cloth.
3. Press and hold (Dn-Up) to entre Cleaning Mode - Tamper Returns Up

Pull down clean...

1. Press and hold (Dn-Up) to enter Cleaning Mode - Tamper Comes Down
2. Turn unit off / unplug.
3. Spin off the base tamp disc (nano coated black) to remove complete assembly including and in order.
 - a. Base disc
 - b. Leveling disc
 - c. Finger guard
 - d. spring
4. Clean the Tamper Disk with a brush and or a dry cloth.
5. Reassemble tamp assembly and turn unit on
6. Press and hold (Dn-Up) to entre Cleaning Mode - Tamper Returns Up

End of day switching off the unit.

1. Press and hold the Down-arrow **T** Tamp Adjustment button together with the (**Dn-Up**) button at the same time.
2. The exit Sleep Mode briefly press the (**Dn-Up**) button to wake up PT2.

CinoArt PT2 - Precision Tamp user guide.

Adjustment and Setting the Portafilter



allen key and Perspex template provided.



as required, please check portafilter fit regularly to assess if adjustment is required.

Adjustment and Setting the Portafilter:

1. Turn off the power by removing the power cord at the rear of the machine.
2. Turn the PT2 upside down or on its side on a smooth flat nonslip surface.
3. Loosen the 2 Hex Screws with the supplied Allen Key.
4. Optional... Place the Portafilter Levelling Guide tool (Perspex) on the Tamping Disk. ECA recommend setting without Guide tool.
5. Fit the Portafilter handle and adjust the Supporting fork down onto the underside of Portafilter handle.
6. Remove the portafilter handle and re-tighten the 2 hex screws ensuring the supporting fork is level with the parallel indicator markings.
7. Test the portafilter handle fit is not too tight and goes in easy.
8. Return the PT2 to the upright position and reconnect the power.

Please note if any of your portafilters are lower, we suggest using the lowest portafilter when setting fork with the Portafilter Levelling Guide tool. If setting without the Portafilter Levelling Guide tool us the highest portafilter.

Icon explanation



competency easy



competency training suggested.



frequency



required tools